

26

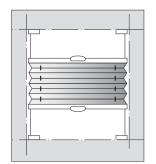



## Installation TopFix / RecessFix [R1]


- Do not damage the product when using a sharp knife to open the packaging!
- Fitting screws: Use a size-2 screwdriver (POZIDRIVE) or use an electric screwdriver at it's lowest torque.
  Rail removal: Use a flat screwdriver of max. 6 mm wide.
  Only use the original screws enclosed, to prevent malfunctioning from using too thick screw heads!


Model **BB24** 

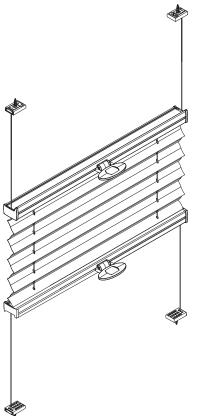





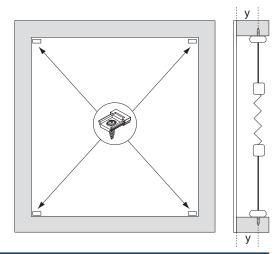


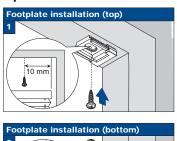

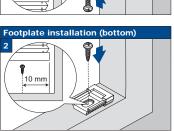

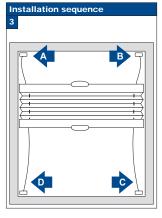

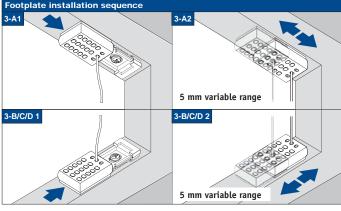

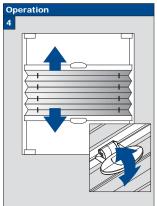




27





## FaceFix installation to a window frame / wall [F1]


- Do not damage the product when using a sharp knife to open the packaging!
- Fitting screws: Use a size-2 screwdriver (POZIDRIVE) or use an
- electric screwdriver at it's lowest torque.
  Rail removal: Use a flat screwdriver of max. 6 mm wide.
  Only use the original screws enclosed, to prevent malfunctioning from using too thick screw heads!


Model **BB24** 

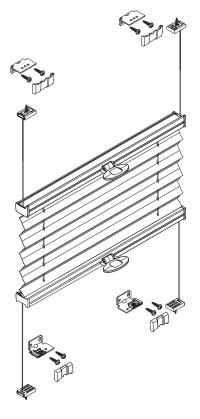




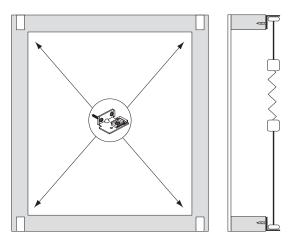


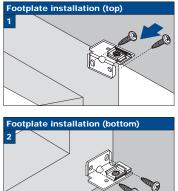

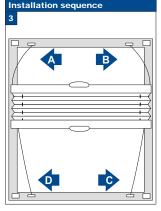

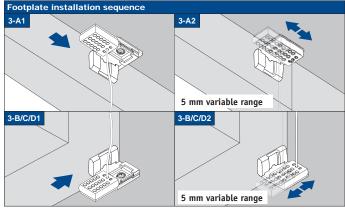

Removal

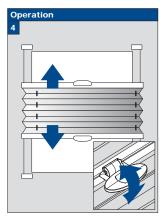

Subject to technical changes